 




Nikon D3100 Speaker Replacement

Replacing the speaker for the Nikon D3100 camera.

Written By: Jet Mejia

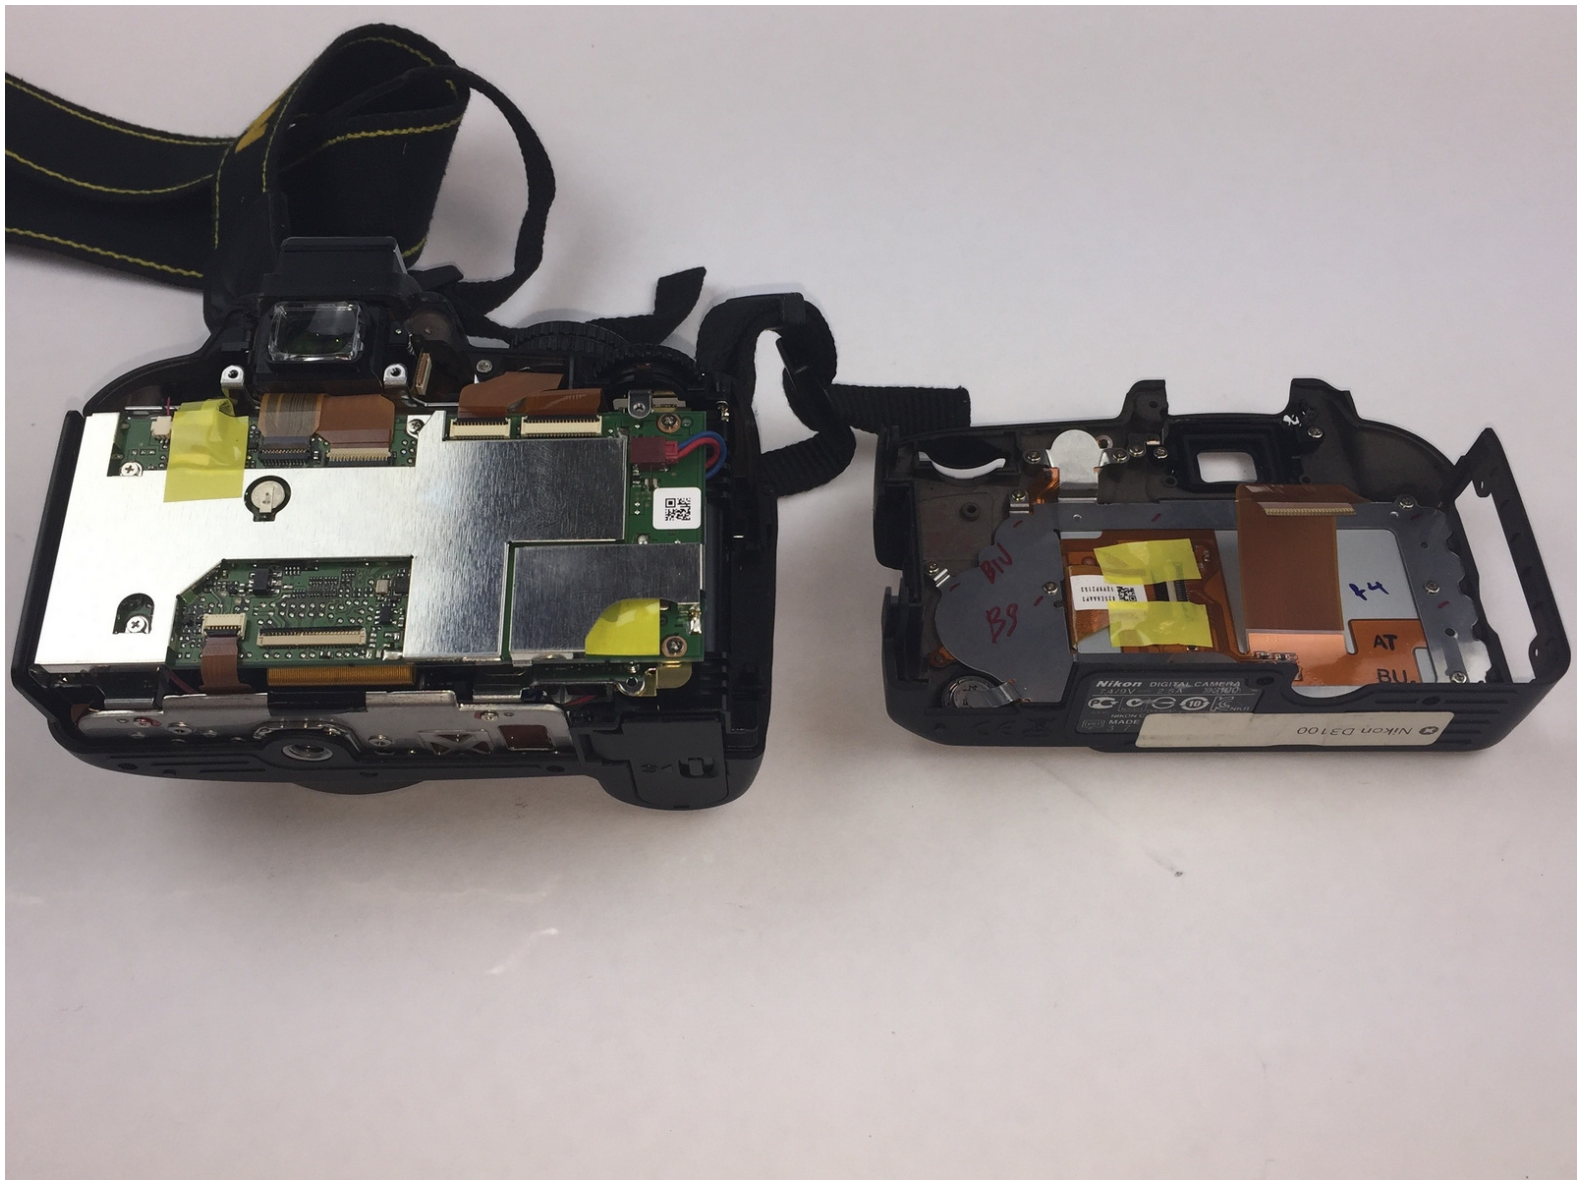

INTRODUCTION



If your camera audio sounds scratchy or muffled you may need to replace the speaker. But first take a look at this [troubleshooting guide](#) before taking the camera apart.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Soldering Station](#) (1)
 - [Metal Spudger](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Speaker

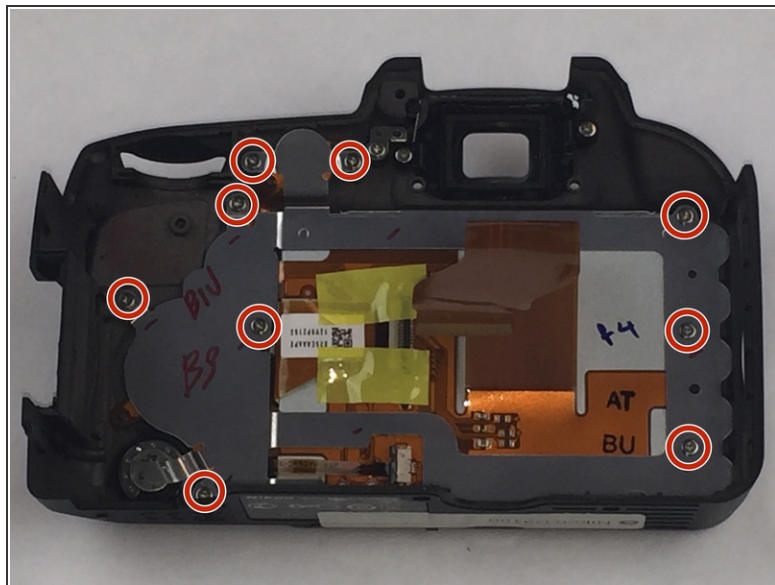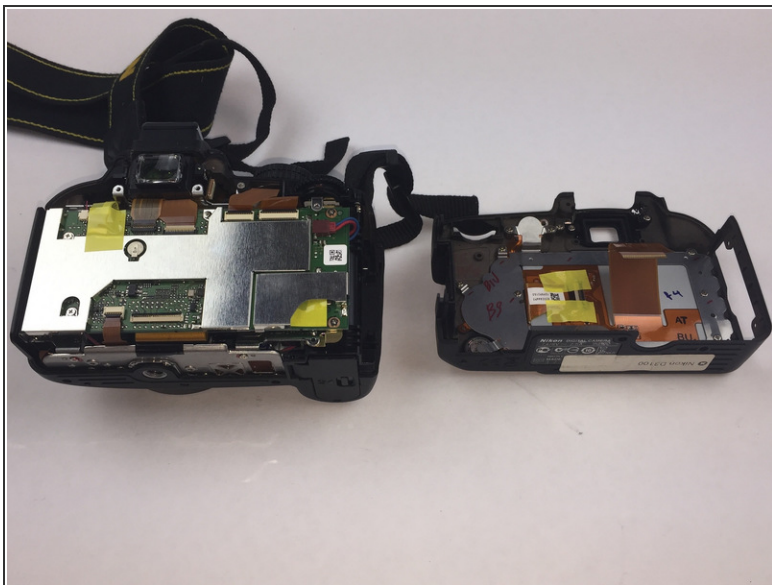


- Begin by following steps 1-6 in the [LCD Screen Replacement Guide](#).

Step 2

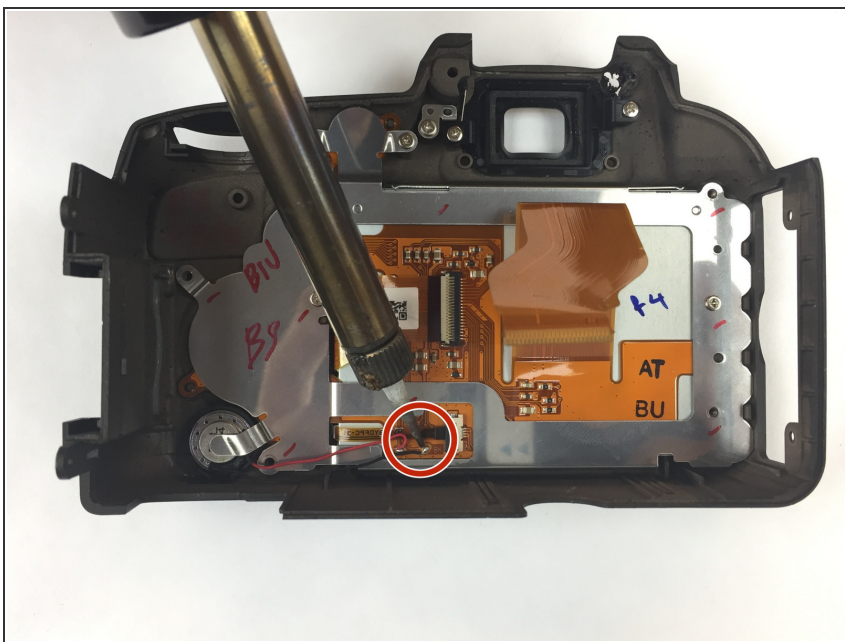

- Using the solder tool, melt the existing solder until the two connections become unattached.

Step 3

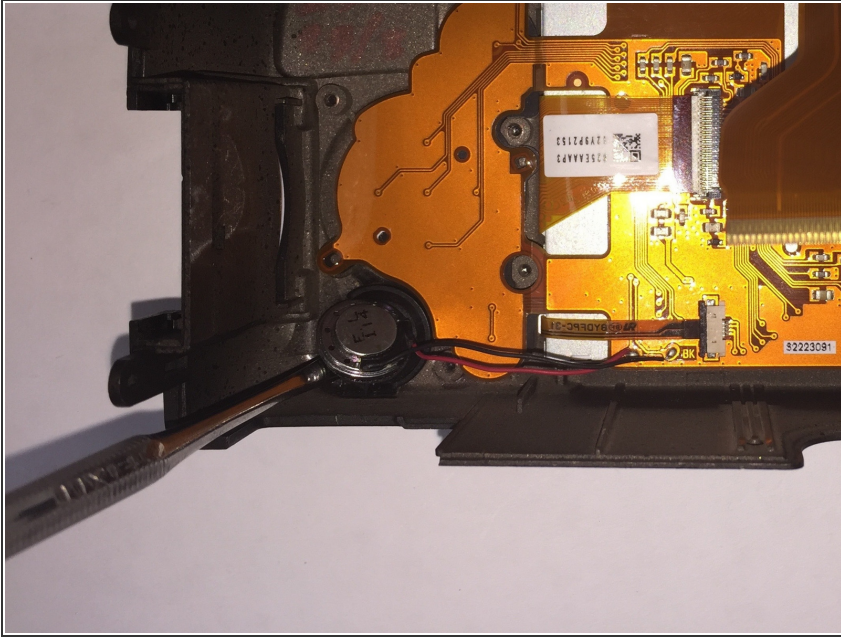

- Carefully lift the speaker from its nook on the bottom left portion of the back panel.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-29 03:24:52 PM.